Installation Instructions –

Armada® Longview Plank Laminate Flooring with Fall Loc

I. Before you start

Keep the boards at room temperature for at least 48 hours in unopened package before you start the installation. The room temperature must be at least 18°C before and during installation. An expansion gap (T-mould) must be inserted for any floors surfaces exceeding 100 m2 (1076sqft.); for lengths exceeding 10m (33ft.); and in all doorways.

Inspect your subfloor before you begin. It must be clean, dry and level to within 5mm (3/16") within a 3 meters (10 foot) span.

- It is recommended to repair any loose boards or squeaks before you begin installation.
- With a floating floor you must always ensure you leave a 1cm (3/8") gap between walls and fixtures such as pipes, pillers, stairs, etc.
 - Tip: When installing around pipes, drill the holes 20 mm (3/4") larger than the diameter of the pipes.
- Choose an underlay material.
- Relative Humidity Levels of your room should be maintained at 30-60 %RH and a temperature of 18-24°C (65 degrees to 75 degrees Fahrenheit).
- Decide on your installation direction. It is recommended to install the length direction of the planks parallel to the main light direction.
- Measure the area to be installed. The board width of the last row shall not be less than 2" (50mm), If so, adjust the width of the first row to be installed. When measuring take the free gap requirement of about 3/8" (10mm) of the floor perimeter into account. In narrow hallways, install the floor parallel to the length.
- Inspect your laminate flooring. No claims relating to surface defects will be accepted after installation.

Subfloors with radiant heat

IMPORTANT: Due to the speed of sudden temperature changes, which has the potential to negatively affect laminate flooring construction, it is not recommended to install over any *electrical radiant heating system*. Installation over electrical radiant heating systems will not be covered by the manufacturer's warranty. Below are instructions is for radiant heating system using water:

Ensure the radiant heat surface temperature never exceeds 27°C (81°F). Before installing over newly constructed radiant heat systems, operate the system at maximum capacity to force any residual moisture from the cementitious topping of the radiant heat system. Then set the thermostat to a comfortable room temperature for the installation. It is recommended that the radiant heat be applied in a gradual manner after installing the laminate flooring. Refer to the radiant heat system's manufacturer recommendations for additional guidance.


II. Floating installation

Your laminate flooring has a pad already attached to the back of each plank, so there is no need for additional foam underlays. If you are installing over a concrete subfloor, a 6-mil poly (plastic sheeting) is to be installed under the laminate.


Remember when installing your laminate floor to leave an open expansion gap of min 10mm (3/8") around the perimeter of the room (use wedges), i.e also at pipes, stairs, columns, doorframes and thresholds. The floor must be able to move free - do not connect or install tight to any construction part. Install to a maximum of 33ft (approx. 10m) length /width at a time. If the room is larger, allow for an expansion gap which can be covered with the appropriate laminate T-mold. Also leave an expansion gap to separate areas in rooms that are off square (for example L-,F-, T-, U- shapes) Always leave expansion gaps in door openings.

IMPORTANT - For reasons both for visual enjoyment and for structural integrity of the total installation, do not install end joints closer than 15" from the end joints of the previous row (for normal 4' length laminate). For Lamett Long Planks (7½' long planks), do not install end joints closer than 24" from the end joints of the previous row.


 First plank, first row. Place a distance 3/8" (10mm) width to the left and position the plank against the wall. Later, after 3 rows, you can easily re-position the flooring away from the front wall for the 3/8" (10mm) expansion gap.

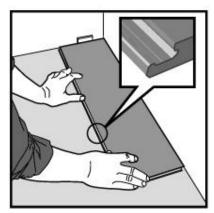


2. Second plank, first row. Place this plank tight to the short end of the first one.

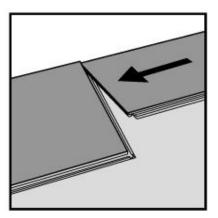


3. Fold down with a single action movement.

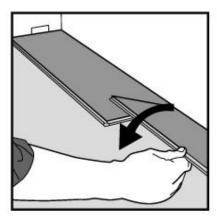


4. At the end of the first row, leave an expansion gap of 3/8" (10mm) to the wall and measure the length of the last plank to fit.

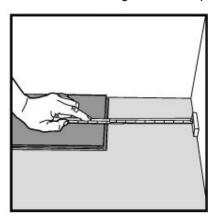

5. If cutting with a jig saw, the laminate surface should be turned down. If cutting with a hand saw, the laminate surface should be face up.

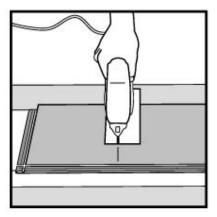


6. Second row, First plank minimum length of 1ft 7 11/16" (500mm). Leave an expansion gap of 3/8" (10mm) against the wall. Generally, the minimum distance between short ends of planks in parallel rows shall not be less than 6 inches (150mm).







7. Install the second plank of the second row.

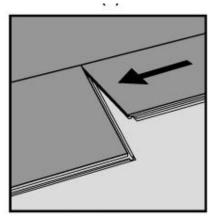


8. Place the panel tight to the short end of the previous panel and fold down in a single action movement.

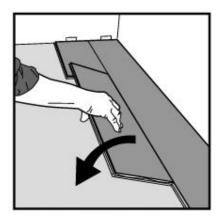


9. After 2-3 rows, re-position the floor to adjust the distance to the front wall to ensure an expansion gap of 3/8" (10mm).

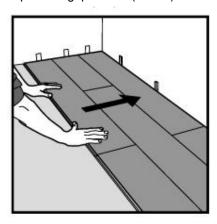

10. Last row (and perhaps also first row). Minimum width must be at least 2" (50mm). Remember to leave an expansion gap of 3/8" (10mm).



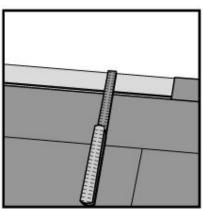

Disassembling

Separate the whole row by carefully lifting up and releasing the whole row. Fold up and release the whole long side.



III. Care and maintenance

Clean the floor regularly with a vacuum cleaner or dry mop. If necessary, the floor may be cleaned with a well wrung cloth and a synthetic detergent. Avoid using too much water. Spillages of water should be wiped off immediately. A general Laminate Floor Cleaner (usually found in spray-type bottles) can also be used for regular maintenance. To protect the floor from sand we recommend you to use doormats at entryways (but do not use mats with a rubber backing). The ideal room humidity is 30-60% and ideal temperature is 20 °C (68 degrees Fahrenheit).